



Boot Apogee Prepress

Steps to start up Prepress Server

Startup procedure for Apogee Prepress Server, Satellites, and Clients.

Audience: Customer, Technical

Product: Apogee X, Apogee Prepress

Start the computer(s)

Turn on the Prepress Server computer and any Prepress Satellites. Wait for Windows to start. Press CONTROL+ALT+DELETE and enter the Windows password to log onto all the computer(s).


Note: the installer should have created a Windows password on all new machines. Satellites should have the same password as Prepress server.

Launch Prepress Manager

Start the Prepress Console.



In the Console window, click on the Start button to start the launch process.

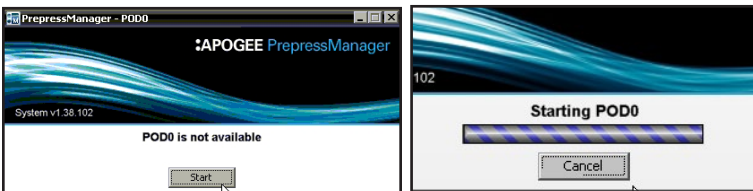

Start the Satellite(s)

Wait a few seconds for Prepress to begin launching on the Server. On Prepress 6.0 and higher, the Satellite(s) will automatically start.

For Prepress version 5.0 and earlier ApogeeX systems, start the Launcher on each Satellite. Start the satellite(s) only after components appear in the console window. This gives the server time to communicate with the satellites.

Check the Startup Progress at the Prepress Server

Wait for Prepress to start. When it has launched the critical framework tasks, the console will say “(Server Name) is available”




Note: startup times will vary depending on options installed, CPU speed, memory and network speed.

Boot Apogee Prepress

Start up Prepress Server

Start the Prepress Client

On the Mac and/or PC workstation, start the Client application.

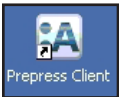

Log on with the user name and password.

